

Equipment Controls

Audio Mode Button
Button used to control Audio Receiver functions

TV Mode Button
Button used to control TV Functions.

RCU Setup
Button used to program remote for different devices.

DVD Mode Button
Press to control DVD functions

Auxillary Mode Button
Press to control Aux Device Functions.

Set Top Box Mode Button
Press to control Set Top Box Functions.

Master Power Button
Press to turn off device that your remote is currently in control of.

DVR Controls

Jump Back Button
Press to jump back 60 seconds

Play/Pause
Press to play current video.

Rewind Button
Press to rewind video in 2x, 4x, 10x, 25x, 50x, 100x, 300x speed

Stop Button
In recorded video, stops playback.

Jump Ahead Button
Press to jump ahead 30 seconds

Fast Forward Button
Press to fast forward video in 2x, 4x, 10x, 25x, 50x, 100x, 300x speed

Record Button
Press to record in live TV or the Guide.

Menu Button
Press to bring up the Menu Bar.

Arrow Buttons
Press to move around a menu.

Guide Button
Press to cycle through the on screen guide and favorites lists.

Volume
Press to Increase/Decrease Volume.

Mute Button
Press to turn off audio.

Input Button
Press to change the input on the TV. (Press TV Mode Button First)

Info Button
Press to bring up information on the current program. (Twice for more information)

OK Button
Press to confirm a command.

Exit Button
Press to exit to live TV.

Page Up/Down Button
Press to scroll a full page in the Guide.

Custom Buttons
Functions vary. Can be programmed.

Channel Button
Press to change channels & scroll a full page in the Guide.

Last Button
Press to change to previously tuned channel.

Closed Caption Button
Press to enable/disable.

Navigation Controls

Turning Television ON/OFF

1. Press **TV** to set remote to control your television.
2. Press **POWER** to turn ON/OFF your television.

Changing Cable Channels

1. Press **STB** to set remote to change cable channels.

